


## JukeBox

Make a music machine that plays different tunes at the push of a button.

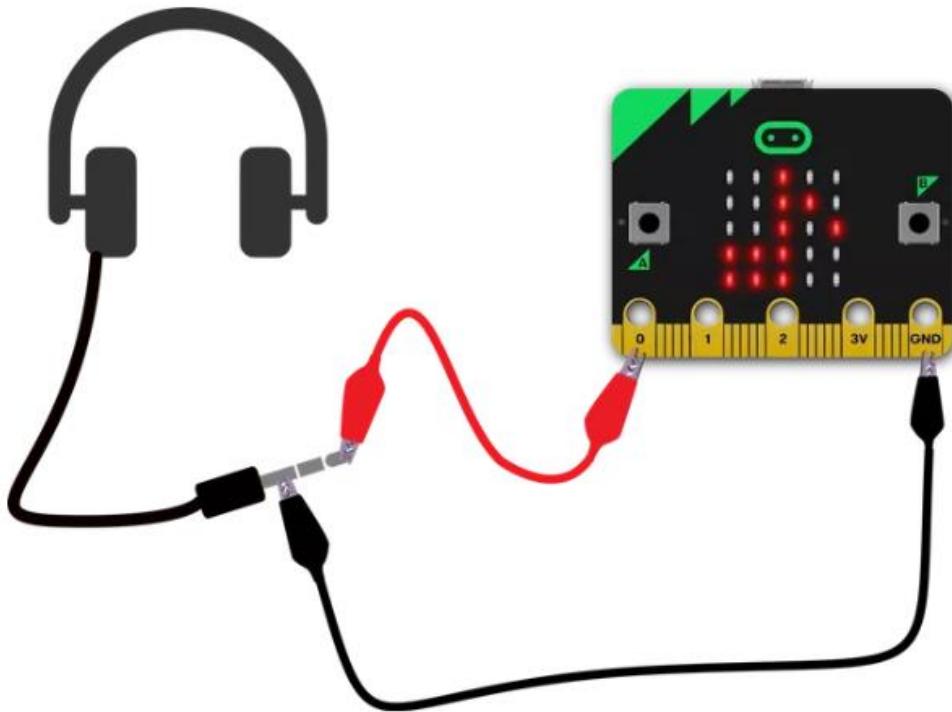

- Connect micro:bit pin 0 to the tip of your headphone plug, and GND to the longer part of the headphone plug.
- When you make sound with the micro:bit, pin 0 becomes an output.
- This program plays different built-in tunes if you press input button A or button B.

## Code



Load this on a micro:bit when you are done and have it checked off.